### Quick Operation of the Alarm Monitoring Platform-PH-BC110



### Checklist

- 1x Laptop/PC, Windows 7/10, XP system, 64-bit Operation System/32-bit Operation System.
- One set of Monitoring Software PH-BC110, including GSM receiver, RS232/USB data line, power adapter for gsm receiver, software key,etc.
- One SIM card for gsm alarm panel, one SIM card for gsm receiver, one mobile phone for setting alarm receiving numbers.
- One set of GSM alarm system for testing with the platform. PS.the platform is only compatible with the Patrol Hawk's GSM alarm panel.



### 1. Install the Software to PC/laptop



#### **Completed Software Installation**



Password: admin Ps. the password can be changed.

#### 2.Inser a SIM cards to GSM Receiver

Insert a SIM card to the gsm receiver, and write down this number if you can't remember it.



SIGNAL: Blinking every 2s means GSM network is normal

#### 3. Connect Power Supply & Power On



1. Connect the power supply for the gsm receiver.

→ 2. Connect the gsm receiver and laptop with the USB/RS232 series cable, as shown on the left image.

3. Connect the GSM antenna for the gsm receiver.

# 4. Check the COM Port of the Inserted Data line



This P	Open
	Pin to Quick access
	Manage
-	Pin to Start
Netwo	Map network drive
	Disconnect network drive
0	Create shortcut
	Delete
scycle	Rename
	Properties
Q.IT	
ntrol Papel	Alarm System
	Center

> Click" Manage"



The above operations, you can know the right COM port of the GSM receiver connect to.

GSM receiver-Add- enter the right COM port - GSM receiver's number. (Refer to step 2.)

## 5. Click "RUN" to turn on the connection between gsm receiver and monitoring software.

Alarm Monitoring S Function(F) Confi	System V1.8.1 — Ad	ministrator Name: ac	Imin		Run the GS	M receiver, so	o it can work	with the
Alarm Records Clier	nt Location Log	Records Remote Co	ontrol Run Conf	ig GSM Receiv	software. ver Increase D	ecrease Leave		
	4         1/25/2021 119 A           3         1/24/2021 11:45           2         1/24/2021 11:44           1         1/24/2021 11:43	<ul> <li>1/25/2021 121 AM 1999378801</li> <li>M 1/24/2021 11:47 PM 15989378801</li> <li>M 1/24/2021 11:45 PM 15989378801</li> <li>M 1/24/2021 11:44 PM 15989378801</li> </ul>	MAGGIE TANG Alarm have been process MAGGIE TANG Alarm have been process MAGGIE TANG Alarm have been process MAGGIE TANG Alarm have been process	ee SHERZHEN CHINA HOST_S eed SHENZHEN CHINA HOST_S eed SHENZHEN CHINA HOST_S eed SHENZHEN CHINA HOST_S	MS:,2one 01 alern.,Instalation A MS:,2one 01 alern.,Instalation A MS:,remote control 03-remote co MS:,remote control 03-remote co	Phone/MAC	Client Name	Disarm status
GSM receiver connection signal	6					Ch	eck the cor	nnection n asm
Эт, сомз	Total:4				Page:1/1		ceiver and s	oftware.

Alarm Records Client Location Log Records Remote Control Close Config GSW Receiver Increase Decrease Leave

- S China MAGGIE TANG	Ala	rm Records A	rm M Disa	rm M Clien Expor	rt Distributed					
		Alarm ID	Alarm time	e	Disarm time	Phone/MAC	Client Name	Disarm status	Host Address	Information
		4	1/25/2021	1:19 AM	1/25/2021 1:21 AM	15989378801	MAGGIE TANG	Alarm have been processed	SHENZHEN CHINA	HOST_SMS:,Zone 01 alarm.,Installatio
		3	1/24/2021	11:45 PM	1/24/2021 11:47 PM	15989378801	MAGGIE TANG	Alarm have been processed	SHENZHEN CHINA	HOST_SMS:,Zone 01 alarm.,Installation
		2	1/24/2021	11:44 PM	1/24/2021 11:45 PM	15989378801	MAGGIE TANG	Alarm have been processed	SHENZHEN CHINA	HOST_SMS:,remote control 03-remot
		1	1/24/2021	11:43 PM	1/24/2021 11:44 PM	15989378801	MAGGIE TANG	Alarm have been processed	SHENZHEN CHINA	HOST_SMS:,remote control 03-remot

GSM receiver connection signal

G\* COM3

<

Total:4

#### 6. Add a User/Device/Client

👗 Alarm Monitoring Sys	stem V1.8.1 — Ac	dministrator Name:	admin				- [	) X	-		
Function(F) Config(C										$\rightarrow$	Click "Client"
Alarm Records Client		Records Remote (	ontrol Run (	Config GSM Receiv		R	<b>9</b>				
Hain Records Chent	Alarm Records	s Arm M Disarm	M Client Distrib	outed	ver   merease i	Decrea	Se Leave				
	Add User	Search Ex	port Import	Disarm User	Arrearage Us	ser	Will Arrearag	e User		$\rightarrow$	Click "Add user"
	Client	Client Name	Phone/MAC	Machine code	Host Name	Host	Address	Host Status			
	1	MAGGIE TANG	5 15989378801	001	G10	SHE	ZHEN CHINA	Disarm			

#### Add a User on the Software



Client name: House owner's name

**Host name:** the alarm panel's model number, this number can be changed by the software management.

**Phone/MAC:** the SIM card phone in the GSM alarm panel.

**Remote Control No.:** Same as the SIM card mobile phone number. Part of the africa countries required to add a "0" in front of the mobile phone number.

**Region Name:** please select the correct country as per the region you are located in.

### How to change the region/country you are located at.

arm Rec S Ch <sup></sup> S	ords (	Client Location Log Records Re	emote Control Run Config	GSM Receiver Increase Decrease Leave
(	Config	Administrator GSM Receiver Data	Base Machine & Code Region	
	Config	Content		Distribute Map
		System Config Name	System Config Content	
	•	Check Password Of Login	True	
		Check Password Of Operate	True	
		Check Password Of Deal Alarm	True	
		Check Password Of Remote	True	
		Allows the same Host ID	True	
	Config	Name: Check Password Of L	ogin	
	Config	Content:   True	O False	e 🐨 🖛 🖉 e 🎸
	Interna	ational Dialing Code and Area	2. Select the co	rrect country name.
	China	(20) - (20) - (20)		-
	Gillia	(00) : 00 China(00)	v	
	Page	Size: 30	~	Change Distribute Map
	Mac /	Address: D6D2D6DD4	4320	



**Machine code:** Define the alarm panel's code as per the actual needs.

**Host Adress:** Fill up the correct installation address for the alarm panel.

**Pay leadine:** Fill in the pay leadline date for this client/user.

**Member Name1**: House owner's name and contact phone number.

Others contact & phone numbers.

## 7. Set Alarm Numbers by SMS for the GSM alarm panel

Detail - Client

7.1. Insert a SIM card to the gsm alarm panel, and write it down if you can not memory it.



the number in the alarm panel should be filled in the client's information -Phone/MAC and Remote Control No.

Tient Name	MAGGIE TANG		Host Name	G10	D	~
Phone/MAC	15989378801		Regions Na	ame Chir	na	~
Remote Control No.	15989378801		Machine co	ode 001		
Host Address	SHENZHEN CHI	NA	000			
Option		1				
Pay Deadline	1/24/2021	Host S	Status	Disarm		
Member Name1	MAGGIE	Memb	er Phone1	18847920	010	
Member Name 2		Memb	er Phone 2			
Member Name 3		Memb	er Phone 3			
Damada C		1				
nemdik						
nemark						
Today's Alarm Info						
Today's Alarm Info	Disam time	)	Nam type		Inform	ation
Today's Alarm Info Alarm time 1/25/2021 1:57	Disarm time AM 1/25/2021 2:0	) )1 AM   A	Nam type Iam have bee	en processe	Inform d HOST_	ation _SMS:,
Today's Alarm Info Alarm time 1/25/2021 1:57 1/25/2021 1:19	Disarm time AM 1/25/2021 2:0 AM 1/25/2021 1:2	) 01 AM A 21 AM A	Nam type Iam have bee Iam have bee	en processe	Inform d HOST d HOST	ation _SMS: _SMS:
Today's Alarm Info Alarm time 1/25/2021 1:57 1/25/2021 1:19	Disarm time AM 1/25/2021 2:0 AM 1/25/2021 1:2	01 AM A 21 AM A	Nam type Iam have bee Iam have bee	en processed	Inform d HOST d HOST	ation _SMS: _SMS:
Today's Alarm Info Alarm time 1/25/2021 1:57 1/25/2021 1:19	Disarm time AM 1/25/2021 2:0 AM 1/25/2021 1:2	) 01 AM A 21 AM A	Nam type I <mark>am have bee</mark> Iam have bee	en processed	Inform d HOST d HOST	ation _SMS:, _SMS:,
Today's Alarm Info Alarm time 1/25/2021 1:57 1/25/2021 1:19	Disarm time AM 1/25/2021 2:0 AM 1/25/2021 1:2	) 01 AM A 21 AM A	Nam type Iam have bee Iam have bee	en processed	Inform d HOST d HOST	ation _SMS: _SMS:
Today's Alarm Info Alarm time 1/25/2021 1:57 1/25/2021 1:19	Disarm time AM 1/25/2021 2:0 AM 1/25/2021 1:2	01 AM A 21 AM A	Nam type Iam have bee Iam have bee	en processed en processed	Inform d HOST d HOST	ation _SMS:, _SMS:,
Today's Alarm Info Alarm time 1/25/2021 1:57 1/25/2021 1:19	Disarm time AM 1/25/2021 2:0 AM 1/25/2021 1:2	01 AM A 21 AM A	Nam type Iam have bee Iam have bee	en processed	Inform d HOST d HOST	ation _SMS:, _SMS:,

GSM alarm panel, model No. PH-G1

#### 8. Set Alarm Numbers with your mobile phone

Edit text messaage to set the alarm receiving numbers, G1 is able to set 3 SMS alarm numbers and 3 Call number. How to set the number, please refer to the user manaul of PH-G1, page 8.

The command format of setting numbers: 1234DD1st mobile phone number, 2nd mobile phone number, 3rd phone number, 1st call phone number, 2 call phone number, 3 call phone number.





#### 1. Alarm panel's SIM number

2. Set alarm numbers for receiving alarm message. PS. 1234 is the alarm panel password, DD is the fixed command,

is the mobile phone number of the house owner for receiving alarm text message, and 13418941749 is the number in GSM receiver.

3. Alarm panel will send you a feedback message like the right side shown.

### 9. Test the whole system

- Armed the GSM alarm panel with remote controller. (Press Arm button+SOS button to enter into quick arm, there're 30s delay arm in default mode.)
- Trigger door sensor/press SOS button to activate alarm panel.
- The house owner's mobile phone will get an alarm message, as well as the second number (GSM receiver and the monitoring platform will get alarm message.)





Alarm text message on the moible phone

#### Show alarming in monitoring platform

#### **10.Deal Alarm on the Platform**

👗 Alarm Monitoring System V1.8.1 — Administrator Name: admin



Click "Alarm Records" - Right click the alarm message - deal alarm - fill in remark content - deal alarm

To know more features about this platform, please read the manual or contact our sales representative.

SHENZHEN PATROL HAWK TECHNOLOGY CO.,LTD. by Maggie Tang 25 January, 2021